


Solon

Textile
Samples




Seat Pad

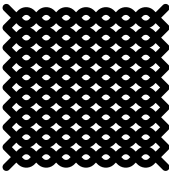

TTPLA /
Fabric_Polyester_Fireretardant



Weight
440 g/m



Martindale
100,000 cycles



Fire resistance
UNI 9175:2010 class I-IM
BS 5852:2006 Point 1 I crib 5

Black



code. 217001900N

Blue



code. 217001900I

Dark Blue



code. 217001900I2

Light Blue




code. 217001900I3

Grey



code. 217001900G

Light Grey

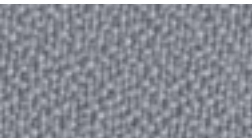

code. 217001900GI

Red




code. 217001900R

Bordeaux



code. 217001900RI

Beige

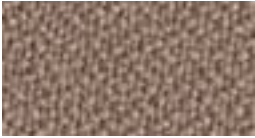


code. 217001900P

Green



code. 217001900V


Upholstered Mesh Back

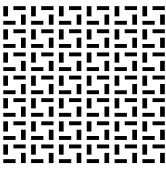

TTDMHE /
Net_Polyester_Fireretardant



Weight
400 g/m



Martindale
30,000 cycles



Fire resistance
UNI 9175:2010 class I-IM
BS 5852:2006 Point 1 I crib 5

Black




code. 217306500N

Blue



code. 217306500I2

Grey

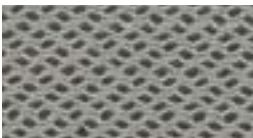

code. 217306500G

Dark Grey




code. 217306500Q

Beige



code. 217306500P

Light Blue

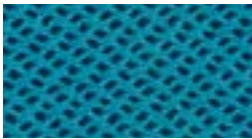

code. 217306500I

Apple Green



code. 217306500V

Please confirm with your KI
Account Manager for the most
up-to-date fabric options,
including additional fabric brands.



KI (UK) Ltd

91 Goswell Road,
London,
EC1V 7EX

kieurope.com/solon
020 7404 7441
info@kieurope.com

KI and Furnishing Knowledge are
registered trademarks of KI Inc